




SUIMING




INSTRUCTION

(MODEL:SM-R048S)

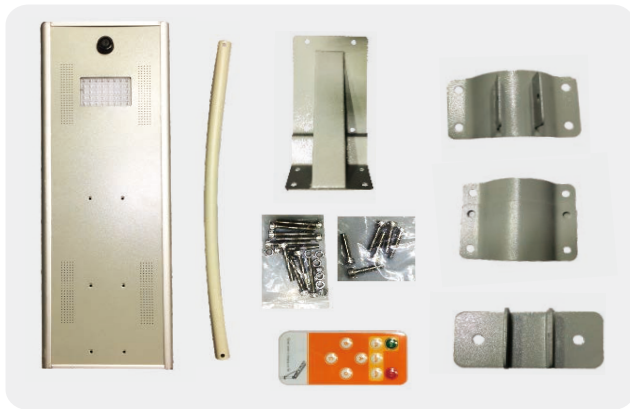

Parts list

	8W	15W / 20W	30W/40W/50W 60W/80W
Lamp	1pcs	1pcs	1pcs
Brace		1pcs	1pcs
Hoops	1pcs	1pcs	4pcs
Brace Rod			1pcs
Screws	M8x55 4pcs	M8x35 4pcs M8x55 4sets	M8x35 6pcs M8x55 10sets
Remote Control		1pcs	1pcs

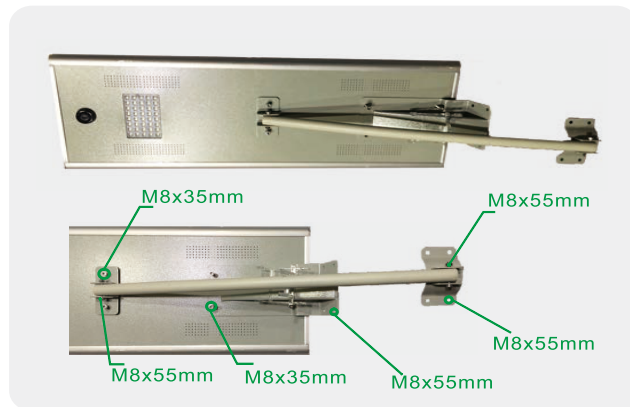

Lamp body assembly

1. Assemble brace

Fasten with M8x35 screws

2. Assemble brace rod & hoops

Fasten with M8x55 screws

3. Use the remote control to turn on the lamp

When the lamp goes through long distance transportation, it will turn to sleep mode automatically.

IF the battery is full power (indicator light on), Turn on it by remote controller.

Warning: Before installation, please point the remote controller to the sensor and press 'ON' button, ensure the lamp in working state.

IF the battery is low power (indicator light off), When the solar light is charged, it can automatically exit the sleep mode, and turn to the normal mode.



Product installation

Fixing the lamp body with hoops

Fasten with M8x55 screws

Debugging & Maintenance

Common faults	Possible causes	Maintenance methods
Lighting not working	Ambient light is too strong	Lamp has light sensor, if there is strong light on the solar panel, the light source will not light up.
	Light source damage	Replacement light source
	Over discharge protection of lithium battery	When sunny day, the battery can be recovered after charging
	Controller damage	Replacement controller
Inappropriate time lighting on	Solar panel are blocked	Clean the solar panel

The street lamp adopts integral modular design, easy to assemble and disassemble. Please apply to the manufacturer for disassembly and assembly video.